

ETC® Install Guide



Source Four® LED CYC

Overview

The ETC Source Four LED CYC adapter is an attachment that installs on the front end of any Source Four LED™ light engine. The following procedure details the installation of this attachment.



WARNING: *The Source Four LED CYC is not compatible with Source Four incandescent fixtures. Use with incandescent fixtures will result in equipment failure.*

Installation Instructions


Tools required

- #1 Phillips Screwdriver

Unassembling the Source Four LED Shutter Barrel

Remove the lens tube from the Source Four LED fixture before removing the shutter barrel.

Lens tube not shown.

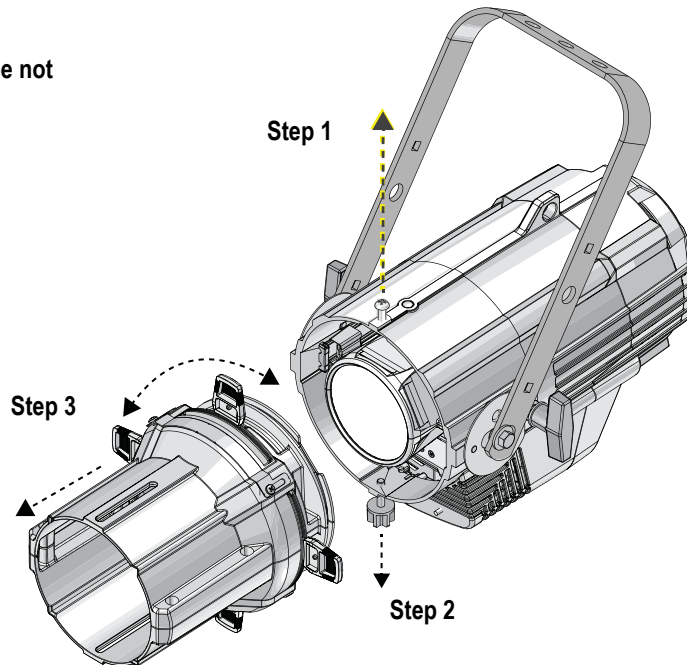

Note: *Both the small screw and barrel screw will hold the CYC adapter in place with a tension mounting and do not need to be fully removed when unassembling the fixture.*

- Step 1: Loosen the small screw.
- Step 2: Loosen the barrel screw.
- Step 3: Rotate the barrel counter-clockwise. The barrel should slide easily off of the light engine.




Corporate Headquarters ■ 3031 Pleasant View Road, P.O. Box 620979, Middleton, Wisconsin 53562-0979 USA ■ Tel +608 831 4116 ■ Fax +608 836 1736
London, UK ■ Unit 26-28, Victoria Industrial Estate, Victoria Road, London W3 6UU, UK ■ Tel +44 (0)20 8896 1000 ■ Fax +44 (0)20 8896 2000
Rome, IT ■ Via Pieve Torina, 48, 00156 Rome, Italy ■ Tel +39 (06) 32 111 683 ■ Fax +44 (0) 20 8752 8486
Holzkirchen, DE ■ Ohmstrasse 3, 83607 Holzkirchen, Germany ■ Tel +49 (80 24) 47 00-0 ■ Fax +49 (80 24) 47 00-3 00
Hong Kong ■ Rm 1801, 18/F, Tower 1 Phase 1, Enterprise Square, 9 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong ■ Tel +852 2799 1220 ■ Fax +852 2799 9325
Service: (Americas) service@etconnect.com ■ (UK) service@etceurope.com ■ (DE) techserv-hoki@etconnect.com ■ (Asia) service@etcasia.com
Web: www.etconnect.com ■ Copyright © 2013 ETC. All Rights Reserved. ■ Product information and specifications subject to change.
7460M2120 ■ Rev C ■ Released 2013-08 ■ ETC intends this document to be provided in its entirety.

ETC Install Guide

Source Four LED CYC

Installing the Source Four LED CYC Adapter

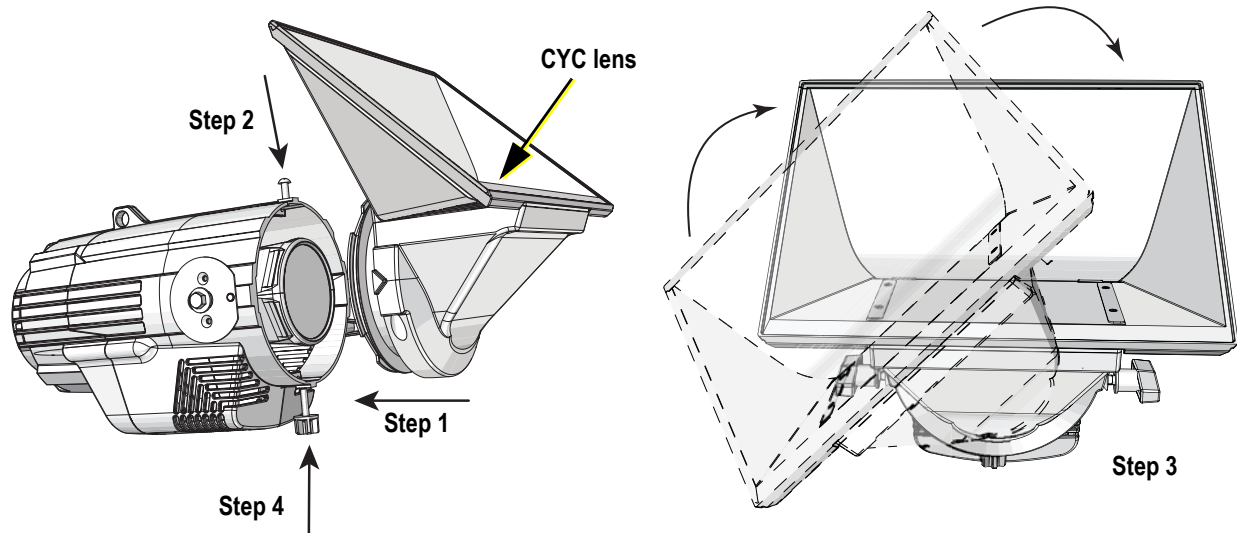


- Step 1: Align the threading on the CYC adapter with the light engine.
- Step 2: Retighten the small screw.
- Step 3: Rotate the CYC adapter, squaring it to the fixture and locking it in place.
- Step 4: Retighten the barrel screw.




Note: The screws provide a tension mounting of the CYC adapter and should not be over tightened.

The CYC adapter can be locked into either of the positions shown here.

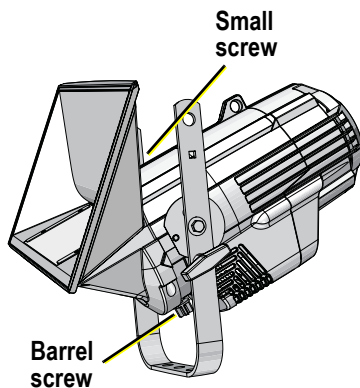

When installing the CYC adapter in this orientation, you will need to swap the screw positions. The barrel screw is too large to be reinstalled behind the vertical portion of the CYC adapter.

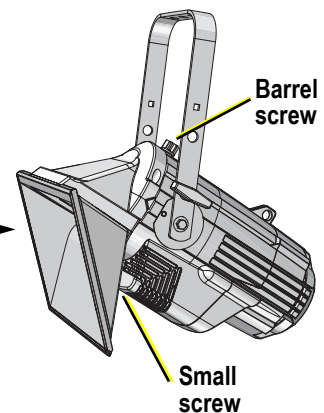

Cleaning

Using a soft cotton or micro fiber cloth, and a 50/50 mix of water and isopropyl alcohol, gently wipe the Source Four LED CYC components clean.



CAUTION: Do not use paper towel as it may cause scratching.